

Code	R	R/W	B	B/W	Y/B	B/B	B/L	B/R	G/R	G/Y	G/B	G/W	G/L	L	L/R	L/B	L/W	L/G	O	O/B	O/W	O/L	W	W/Y	W/L	W/B	W/R	Lg/R
Definition	Red	Red/White	Black	Black/White	Black/Yellow	Black/Brown	Black/Blue	Black/Green	Green/Red	Green/Yellow	Green/Brown	Green/White	Green/Blue	Blue	Blue/Red	Blue/Black	Blue/White	Blue/Green	Orange	Orange/Black	Orange/White	Orange/Blue	White	White/Yellow	White/Blue	White/Brown	White/Black	Light green/Red
Code	Y	Y/W	Y/R	Y/B	Y/L	Y/G	Gr	Gr/R	Gr/W	Gr/B	Br	Br/R	Br/L	Br/G	Br/W	Br/B	Lg	Lg/R	Lg/B	Lg/Br	Lg/Y	Lg/W	Lg/Bl	Sb	Sb/W	G/V		
Definition	Yellow	Yellow/White	Yellow/Red	Yellow/Black	Yellow/Blue	Grey	Grey/Red	Grey/Black	Brown/Red	Brown/White	Brown/Blue	Brown/Brown	Brown/Black	Brown/Green	Brown/White	Brown/Black	Light green	Light green/Red	Light green/Blue	Light green/Brown	Light green/Yellow	Light green/White	Light green/Black	Grey/Blue	Grey/White	Green/Violet		

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Ignition switch	Clock/ECU	Fan	ERS	Fuel Pump	Lighting	external power supply outputs	standby (warm wind)	Ignition coil	Indicator	MP3, little light	stop/witch/drain pump switch	warning light/horn	neutral	Two / four-wheel drive brake
30A	10A	30A	30A	20A	15A	30A	20A	20A	15A	10A	15A	10A	10A	15A



Spot Light

Fan




EPS

Lighting

Starter

Ignition

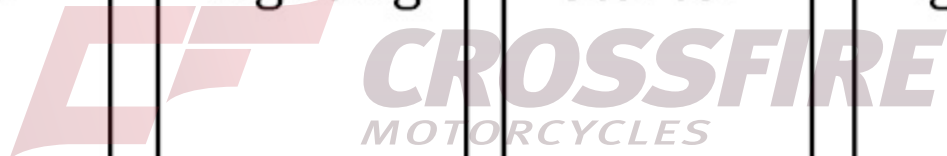

Fan

F/Pump

Injector

Flasher